

springbcr®

autofly™

**ASSEMBLY INSTRUCTION MANUAL
SIZE LARGE**



**MADE IN U.S.A. BY
KIRKHAMS OUTDOOR PRODUCTS**

BASIC SETUP ON CAR WITH RACK



1 Clip Guyweb to 5 places as shown, lay flat



2 Assemble 3-piece rail bar. Position button in middle of 3 holes of each outer piece to start. Length can be adjusted if needed.



3 Insert Rail bar into pocket and secure Velcro closure



4 Position Rail bar end of Autofly against rack, working from the top of the canopy.

5 Starting in the middle, secure Rail bar(short) straps around the most secure part of your rack, as many as will fit. The middle strap should generally be in the middle of your rack, but exact positioning of the straps is flexible, try to go for the best and most balanced support. Go back and snug all Rail bar straps to make sure they're secure. They do not need to be extremely tight.

PLEASE NOTE THAT YOUR RACK MAY NOT BE LONG ENOUGH TO ACCOMMODATE ALL OF THE STRAPS. THIS IS OK. THE EXTRA STRAPS CAN BE LOOSE AND NOT ATTACHED TO ANYTHING.

6 Starting on the middle of the front of the Autofly, extend 6' canopy pole to desired height (this may be slightly higher than the 2 side canopy poles) and insert tip into grommet. Pull the Guyweb straight out & insert stake through the loop and stake to ground. Tighten the Guyweb slightly by pulling web through the buckle.

WARNING! ALTHOUGH REASONABLE PRECAUTIONS HAVE BEEN TAKEN, PLEASE NOTE THAT KIRKHAM'S ACCEPTS NO LIABILITY FOR DAMAGE TO VEHICLE. USER IS USING AT HIS/HER OWN RISK.



7 Next, extend 2 more 6' canopy poles to desired height (may be slightly less than the middle canopy pole) and insert on one corner as shown. Then stake Guyweb out at about a 45 degree angle and stake through loop and stake to the ground)



8 Tighten all 3 front Guywebs so they are very snug.

9 Stake Guyweb on each wing side as shown and secure to be snug. The angle is optional depending on how much side protection you want. The wings provide added protection and overall stability.



MOST POPULAR OPTIONAL SETUP CONFIGURATIONS

(A requires Freestand Setup Package)



A 2 WINGS WITH CANOPY POLES AND CANOPY POLES AT FRONT. (5 canopy poles required)




B 2 WINGS WITH CANOPY POLES AND FRONT DOWN FOR MORE PROTECTION. (2 canopy poles required)



C 2 WINGS WITH CANOPY POLES AND MIDDLE CANOPY POLE ONLY (3 canopy poles required)

BASIC FREESTANDING SETUP


(NOTE THAT THE OPTION OF USING ALL CONFIGURATIONS REQUIRES THE PURCHASE OF THE OPTIONAL FREESTAND SETUP PACKAGE)

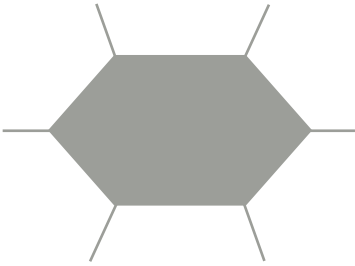

1 Lay Autofly flat on ground and clip Guywets into 6 places as shown. Smooth Autofly out so it is as flat as possible.

2 Position loop ends of 2 Guywets already attached to 2 wings H2(as shown), about 4' straight out as shown and stake to ground.

3 Position loop ends of 4 Guywets already attached to 4 corners H3 (as shown) about 4' out AT APPROX 45 degree angle and stake to ground.

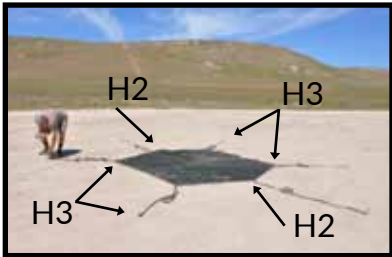

4 Extend 2 6' canopy poles to full height. Place one canopy pole in grommet of Wing end as shown. Now place one canopy pole in grommet of opposing Wing end as shown. Loosen or tighten Guyweb as needed during this process, but finish by generally tightening the Guywets on each end to create tension along the top of the Autofly across the center as shown.



5 Extend remaining 4 6' canopy poles to desired length. Place, one at a time, in each of the remaining corners as shown, tightening or loosening Guywets as needed as you proceed. Finish by securing all Guywets to be snug and taught.

OTHER POPULAR FREESTANDING OPTIONAL SETUP CONFIGURATIONS



A1 "Lean-To" with 2 Wing
and 2 Corner poles.
(4 canopy poles required)



A2 "A Frame" with 2 Wing
poles only – sides can
be secured at any angle wished.
(2 canopy poles required)



A3 With 4 corner poles
only and Wings down.
(4 canopy poles required)




A4 With 2 Wing poles and 2
Poles center of each side.
(4 canopy poles required)

NOTE: Autofly may be set up in the Freestanding configuration with or without the Rail Bar in place. Generally, the bar provides added stability, but also adds weight and may not be useful or desirable in all configurations.

PARTS REQUIRED



Basic Car Rack Setup: 1 - 3 Piece Rail Bar
Freestand Setup: 1 - 3 Piece Rail Bar

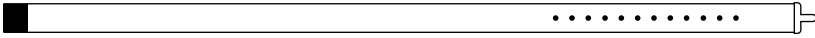

Basic Car Rack Setup: 3 - 2 Piece 6' Canopy Poles
Freestand Setup: 6 - 2 Piece 6' Canopy Poles



Basic Car Rack Setup: 5 - Guyweb Strap/buckle
Freestand Setup: 6 - Guyweb Strap/buckle



Basic Car Rack Setup: 5 - Plastic Stakes
Freestand Setup: 6 - Plastic Stakes

GENERAL CARE

- Make sure Autofly is completely dry and as clean as possible before storage. If it must be placed into the storage bag when wet, it should be removed as soon as possible and opened up so it will dry completely to prevent mildew.
- Keep inside of upright poles clean and free of sand and dirt after use.

CONTACT INFORMATION

If you have any questions regarding care or use of your Springbar® Autofly, please feel free to contact us directly:

- CALL: Kirkham's Outdoor Products toll free 1-800-453-7756 or 1-801-486-4161.
- E-MAIL: customers@kirkhams.com